


Procedure for changing later Lucas wiper motor park position


- Remove the wiper arms from their spindles
- Remove wiper motor from the car. This can be done whilst leaving the wiper spindles and wiper tube located to the scuttle.
- Undo the 'bundy' nut securing the wiper tube to the wiper motor body.
- Remove the 'U' clamp securing the wiper motor body to the chassis.
- Withdraw the wiper motor from the car. Note that a cable will draw out from inside the tube, this is covered with grease, so care is required not to contact interior trim etc...
- Remove the four cover screws from the back of the wiper motor body (fig.1.)




- Remove the circlip from the spindle shaft on the front of the wiper motor body (fig.2.)

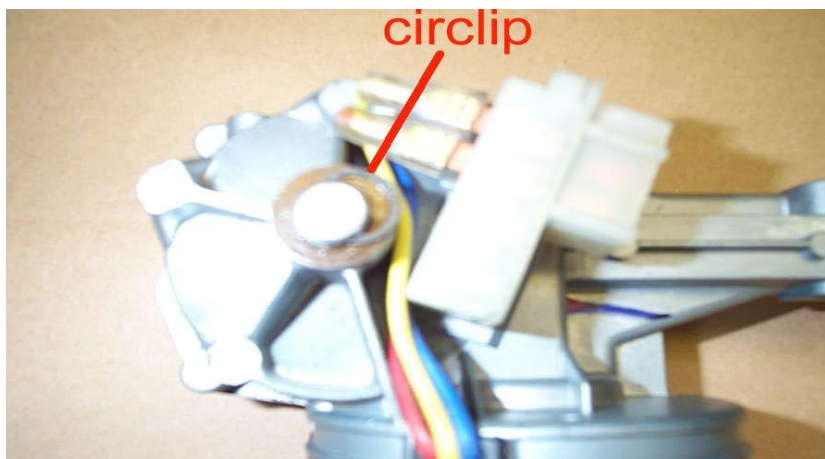

- With the cover plate removed withdraw the wiper gear from the motor body. It may require pushing through from the front of the motor body. N.B. The gear has a connecting rod fitted to it which locates in the wiper cable (fig.3.)

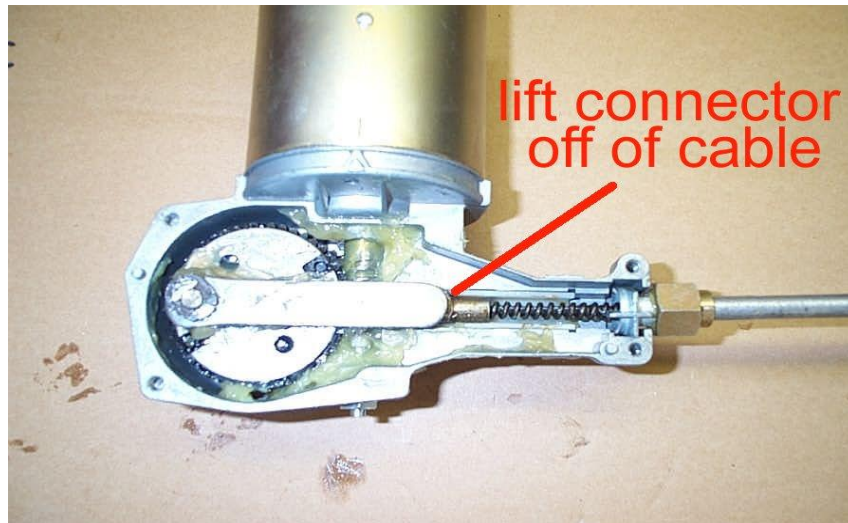

- Remove the white plastic 'park' stop from the back of the gear and re-position in the opposing locating holes. N.B. there is a bellville washer located on the spindle shaft on the back of the gear (fig.4.)

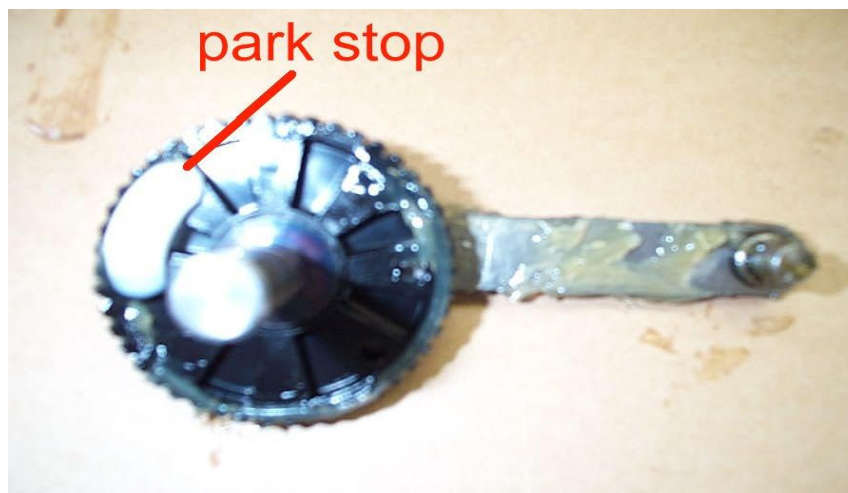

- Replace the wiper gear in the wiper body (ensuring the bellville washer is in place) and locate the connecting rod in the wiper cable.
- Position the circlip in the wiper spindle groove. It will be necessary to apply pressure to the wiper gear so as to reveal the circlip groove.
- Replace the cover plate.
- Refit wiper motor assembly to the vehicle.